

SUPPLEMENTARY LOCATION LIST (FOR LOCATIONS NOT SHOWN ON FACE OF DRAWING)		
ITEM NO.	DESCRIPTION	LOCATION
PANEL 39	RH O'HD AFT AC ESS CB PANEL	130 RH
PANEL 49	DC PWR SWITCH PANEL	90 LH
PANEL 55	COVER ASSY — ELEC PWR DIST BOX	233
PANEL 60	BRKT ASSY — ELEC PWR RELAY DIST BOX COVER	333
P540	PLUG — PANEL 39 DISC (J525)	130 RH
P541	PLUG — PANEL 39 DISC (J526)	130 RH
P549	PLUG — (J534)	330 ☐
P557	PLUG — PANEL 49 DISC (J542)	90 LH
P575	PLUG — (D5522)	94
P648	PLUG — (J585)	330
P651	PLUG — (J588)	330
P654	PLUG — (J591)	330
P694	PLUG — (J604)	206 FWD
P695	PLUG — (J605)	206 FWD
P639	PLUG — LH ENG AUX. DISC (J580)	330 LH
P640	PLUG — RH ENG AUX. DISC (J580)	330 RH
TB501	TERM BD	333 FWD
TB550	TERM BD	300

SUPPLEMENTARY LOCATION LIST (FOR LOCATIONS NOT SHOWN ON FACE OF DRAWING)		
ITEM NO.	DESCRIPTION	LOCATION
PANEL 35	MASTER SW PANEL	110 ☐
PANEL 39	RH O'HD AFT CB PANEL	130 RH
PANEL 49	DC PWR SW PANEL	98 RH
PANEL 61	AC & DC PWR INSTRUMENTS	98 RH
P540	PLUG — PANEL 39 (J525)	130 RH
P549	PLUG — (J534)	333 ☐
P557	PLUG — PANEL 49 (J542)	90 LH
P565	PLUG — PANEL 35 (J550)	110 ☐
P689	PLUG — PANEL 61 (J599)	90 LH
P601	PLUG — FS 333 RELAY BOX (J566)	333 LH
P648	PLUG — FUS (J585)	330 LH
P650	PLUG — FUS (J587)	330 RH
P651	PLUG — NACELLE (J588)	330 LH
P654	PLUG — NACELLE (J591)	330 RH
P815	PLUG — FIRE WALL (J815)	330 ☐
P816	PLUG — FIRE WALL (J816)	330 ☐
P1014	PLUG — (J1014)	143 RH
TB531	TERM BD	333 ☐

- EFFECTIVITY**
- 1 AIRPLANES CHANGED BY S/B 74-12
 - 2 AIRPLANES NOT CHANGED BY S/B 74-12
 - 3 AIRPLANES CHANGED BY SOK 82-15
 - 4 AIRPLANES NOT CHANGED BY SOK 82-15

- NOTES/LEGEND**
- 1. FOR OPERATION OF THIS RELAY SEE ENGINE STARTING SYSTEM, C9.1.
 - 2. SEE SYSTEMS LISTED BELOW:
B1.2 DC GENERATOR SYSTEM (SHEET 2).
B2 DC BUS TIE-IN SYSTEM.
 - 3. FOR DETAIL GROUND CIRCUIT SEE ELECTRICAL GROUND SYSTEM (B7.1).

